Shaver



8140XL

Corona

Philips Domestic Appliances and Personal Care



PRODUCT INFORMATION

General:

- Mains/rechargeable operation
- World-wide automatic voltage selection
- Electronic on/off button
- Washable

Safety information

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

Shaving Performance:

If customers complain about poor shaving performance of the triple-track shaving heads, replacing the driving unit is recommended.

TECHNICAL INFORMATION

- Voltage
- : 100 240 Volt / 50- 60 Hz
- Motor voltage : 3,6 Volt
 - : HQ9 4222 036 11150
- Shaving headsSAP coding
- : 8140XL

DISASSEMBLY- AND RE-ASSEMBLY ADVICE

Disassembly:

- Remove shaving unit, to prevent damaging during repairing.
- Remove the 2 screws A on the backside of the shaver.
- Remove the 2 screws **B** out of the hairchamber.
- Remove the hairchamber from the body.
- Remove the cover.
- Take out the basic body.
- Remove the 3 screws C on the cover side off the basic body.
- Remove the cover from the basic body.
- Remove the mains from the motor by turning and pulling the wires out of the motor.
- Remove the driving unit by pushing the motor.

REPAIR INSTRUCTION

- No specific issues

OPTIONAL (accessories)

- Pouch ME : 4222 036 11500

Published by Philips Domestic Appliances and Personal Care

Printed in the Netherlands


© Copyright reserved


Subject to modification





EXPLODED VIEW & PARTS LIST


8140XL

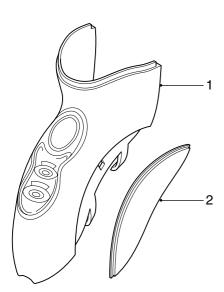

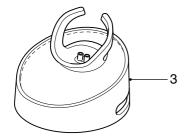

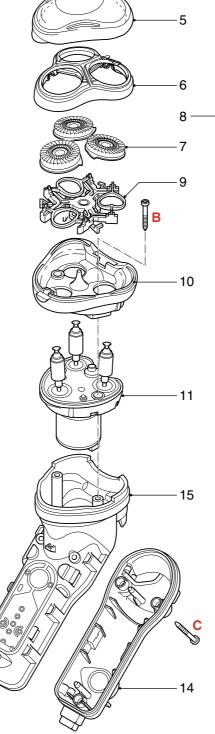

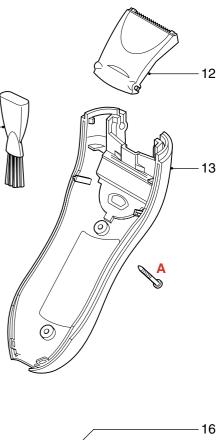

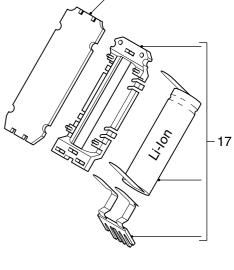

Pos	Service code	Description	
1	4222 036 12020	Housing-assy	8140XL
2	4222 036 12100	Grip left & right	
3	4222 036 12120	Stand	
4	4222 036 05160	Power plug	NOR
5	4222 036 12130	Protection cap	Corona
6	4222 036 12150	Bracket-assy	
7	4222 036 11150	Shaving heads	
8	4222 036 02770	Brush	
9	4222 036 11220	Holder-assy	

4

Pos	Service code	Description
10 11 12 13	4222 036 12160 4222 036 12190 4222 036 12220 4222 036 12220 4222 036 12250	Hairchamber Driving unit 3,6 V Trimmer assy
13 14 15	4222 036 12230 4222 036 12200 4222 036 12210	Cover-assy Cover assy BB Housing assy BB
16 17	4222 036 12350 4222 036 12390	Power supply Spacer assy
	4222 036 11480	Screw